



UDKG-01i
“Gamma Sapiens”
INTELLECTUAL
GAMMA RADIATION
DETECTOR

Operating manual



**“Gamma Sapiens”
INTELLECTUAL
GAMMA RADIATION
DETECTOR
UDKG-01i**



“Made for iPhone,” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPhone or iPad and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPhone or iPad may affect wireless performance.

Made for:

- iPhone 5S
- iPhone 5
- iPhone 4S
- iPhone 4
- iPad (3rd generation)
- iPad 2

iPhone 5S, iPhone 5, iPhone 4S, iPhone 4, iPad (3rd generation) and iPad 2 are trademarks of Apple Inc., registered in the U.S. and other countries.

Dear users,

You had chosen well if purchased a device of “ECOTEST” trademark manufactured by “Sparing-Vist Center”. Your device is easy to use and can be applied for household purposes without special training of the user. Should any questions arise, please contact our managers by telephone (+38 032) 242-15-15, fax (+38 032) 242-20-15 or e-mail sales@ecotest.ua.

We would greatly appreciate to receive your comments and suggestions on its operation. The device is under 18-months (free of charge) warranty maintenance.

Best regards, International Sales Department

Dear users,

We would like to draw your attention to the delivery kit of the UDKG-01i “Gamma Sapiens” intellectual gamma radiation detector that includes two AAA batteries. However, the power for operation can also be supplied by two AAA nickel-metal-hydride (NiMH) rechargeable batteries of no less than 800 mAh capacity instead of batteries that come with the device. You can buy these rechargeable batteries and their charger at any retail outlet. Famous manufactures, such as Varta, are highly recommended.

Choose an automatic battery charger, preferably with a function to control charging of each rechargeable battery.

Charge rechargeable batteries only when they are fully discharged. Recharging partially discharged rechargeable batteries on a repeated basis minimizes considerably their lifespan.

Do not use one rechargeable battery along with a non-rechargeable one to power the gamma radiation detector. This will lead to the rechargeable battery failure.

CONTENTS

1 DESCRIPTION AND OPERATION.....	4
2 PURPOSE OF USE	18
3 MAINTENANCE	30
4 CERTIFICATE OF ACCEPTANCE	35
5 PACKING CERTIFICATE.....	36
6 WARRANTY	37
7 REPAIR	39
8 STORAGE	40
9 SHIPPING.....	41
10 DISPOSAL.....	42
WARRANTY CERTIFICATE.....	43

This operating manual (hereinafter called the OM) is intended to inform the user about the principles of operation of the UDKG-01i “Gamma Sapiens” intellectual gamma radiation detector and its operation procedure. The OM contains all information necessary for proper use of the detector and full realization of its technical capabilities.

The UDKG-01i “Gamma Sapiens” intellectual gamma radiation detector is easy to use without the need of special training of the user.

The UDKG-01i “Gamma Sapiens” intellectual gamma radiation detector is intended to work with devices which run the iOS operating system such as iPhone 5S, iPhone 5, iPhone 4S, iPhone 4, iPad (3rd generation) та iPad 2 – hereinafter called the iOS devices.

The OM contains the following abbreviations and symbols:

DE - ambient dose equivalent of gamma radiation;

DER - ambient dose equivalent rate of gamma radiation;

QCD - Quality Control Department;

TS - technical specifications.

1 DESCRIPTION AND OPERATION

1.1 Purpose of use

The UDKG-01i “Gamma Sapiens” intellectual gamma radiation detector (hereinafter called the detector) is designed to measure ambient dose equivalent (DE) and ambient dose equivalent rate (DER) of gamma radiation and transfer measured data to the iOS device via the Bluetooth radio interface.

The detector is used to:

- monitor personal radiation safety;
- monitor apartments, buildings, and constructions, household items, clothes, soil surface of grounds, and vehicles exposed to radiation.

1.2 Technical specifications

1.2.1 Measurement range of gamma radiation DER – from 0.1 to 5000 $\mu\text{Sv/h}$.

1.2.2 Main relative permissible error limit in gamma radiation DER measurement $\delta\dot{H}^*(10)$, %, with confidence probability of 0.95 (calibrated with ^{137}Cs) is estimated by the formula:

$$\delta\dot{H}^*(10) = 25 + 2/\dot{H}^*(10) \quad (1.1)$$

where $\dot{H}^*(10)$ is a numeric value of measured gamma radiation DER equivalent to microsieverts per hour ($\mu\text{Sv/h}$).

1.2.3 Measurement range of gamma radiation DE is from 0.001 to 9999 mSv.

1.2.4 Main relative permissible error limit in gamma radiation DE measurement with confidence probability of 0.95 is 25 %.

1.2.5 Energy range of registered gamma radiation is from 0.05 to 3.00 MeV.

1.2.6 Energy dependence of the measurement results during gamma radiation DER and DE measurements in the energy range from 0.05 to 1.25 MeV is not more than $\pm 25\%$.

1.2.7 Complementary permissible error limit in gamma radiation DER and DE measurements caused by ambient air temperature variations from -18 to $+50\text{ }^{\circ}\text{C}$ is not more than 5% per each $10\text{ }^{\circ}\text{C}$ deviation from $20\text{ }^{\circ}\text{C}$.

1.2.8 Power for the detector is supplied by two AAA batteries with power supply voltage of 2.4-3.2 V. General operating supply voltage is 3.0 V.

1.2.9 Complementary permissible error limit in gamma radiation DER and DE measurements caused by supply voltage variations of the detector within 2.4- 3.2 V is not more than 5% .

1.2.10 Time of continuous operation of the detector when powered from two AAA batteries of 1280 mAh capacity under natural radiation background conditions is not less than 48 hours.

1.2.11 Time of operating mode setting is not more than 3 minutes.

1.2.12 Unstable readings of the detector for an 8-hour continuous operation is not more than 5 %.

1.2.13 The Bluetooth radio interface serves as the interface for data communications between the detector and the iOS device.

1.2.14 Range of the detector's interface is not less than 5 m.

1.2.15 Mean time between failures is not less than 6000 hours.

1.2.16 Average service life of the detector is not less than 6 years.

1.2.17 Mean time to repair of the detector is not more than 12 hours.

1.2.18 Average shelf life of the detector is not less than 1 year.

1.2.19 Dimensions of the detector is not more than 19×40×95 mm.

1.2.20 Weight of the detector without batteries is not more than 0.05 kg.

1.2.21 The detector meets the requirements of technical specifications (TS) under the following operating conditions:

- temperature from – 18 to + 50 °C;
- relative humidity up to 95 % at + 35 °C, non-condensing;
- atmospheric pressure from 84 to 106.7 kPa.

1.2.22 The detector is tolerant to sinusoidal vibration effects of the group N1 according to ГOCT 12997-84 over a frequency range of 10 – 55 Hz, shift amplitude corresponds to 0.15 mm.

1.2.23 The detector withstands exposure to shocks according to ГOCT 12997-84 with the following parameters:

- shock pulse duration – 9.5 ms;
- number of shocks – 1000 ± 10 ;
- maximum shock acceleration – 100 m/s^2 .

1.2.24 The detector in its shipping container can endure:

- ambient air temperature from -25 to $+55 \text{ }^\circ\text{C}$;
- relative air humidity up to $(95 \pm 3) \%$ at $+35 \text{ }^\circ\text{C}$ temperature;
- shocks with 98 m/s^2 acceleration, shock pulse duration – 16 ms, number of shocks – 1000 ± 10 in each direction.

1.2.25 The detector is immune to constant or alternating electromagnetic field of 400 A/m at $(50 \pm 1) \text{ Hz}$.

1.2.26 The detector tolerates exposure to gamma radiation with DER of 1 Sv/h within 5 minutes.

1.2.27 Ingress protection rating of the detector's housing meets IP30 specifications according to ГОСТ 14254-96.

1.2.28 The design of the detector supports decontamination.

1.3 Delivery kit

1.3.1 The detector delivery kit consists of units and maintenance documentation presented in Table 1.1.

Table 1.1 – Delivery kit of the UDKG–01i detector

Type	Item	Quantity	Note
BICT.412129.027-06	UDKG–01i “Gamma Sapiens” intellectual gamma radiation detector	1 pc.	
BICT.412129.026-06 HE	Operating manual	1 copy	
	ENERGIZER AAA 1.5 V battery	2 pcs.	Batteries of other manufact urers are permi- tted
	Case of model 491, Galvemo Ltd	1 pc.	
BICT.412915.025-06	Package	1 set	

1.4 Design and principle of operation

1.4.1 General information

The detector is presented as a monoblock construction with a built-in sensor of gamma radiation (the Geiger-Muller counter), a printed-circuit board with electronic components, and batteries.


The operation principle of the detector is based on transformation of radiation by the Geiger-Muller counter into the sequence of voltage pulses; the number of pulses is proportional to the registered radiation intensity.

The power for operation is supplied by two AAA batteries.

1.4.2 Design description

The detector is designed as a flat square plastic housing with rounded corners.

The housing (Figure 1) consists of the front (1) and the back (2) covers.

On the right side of the front cover there is a disk-shaped control and indication board (3) with a decorative circle frame (4) around. The window (5) for two-color LED indicators and the  control button (6) are also located in that area.

The battery compartment (7) for two AAA batteries is in the middle of the back cover. The polarity signs are indicated at the bottom of the battery compartment (7) for proper insertion of batteries. The battery compartment is closed with a lid (8).

A clip with an opening (9) fixed to the back cover is used to attach the detector to a strap.

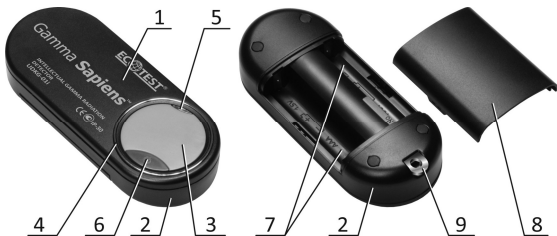


Figure 1 – UDKG-01i “Gamma Sapiens” intellectual gamma radiation detector

1.5 Labeling and sealing

The detector is inscribed with the:

- full name of the detector;
- trademark of the manufacturer;
- approval mark in compliance with ДСТУ 3400:2006;
- CE marking;
- ingress protection rating meets IP30 according to ГОСТ 14254-96.

The TS number and “Made in Ukraine” marking are placed on the individual packaging of the detector.

1.5.1 The housing of the detector (under a battery compartment lid) should contain:

- type, voltage and polarity of batteries;
- date of manufacture;
- serial number according to the numbering system of the manufacturer.

1.5.2 Labeling quality meets the ГOCT 26828-86 requirements and is maintained during service life under all conditions and modes, except for labeling done on the individual package.

1.5.3 All detectors accepted by the Quality Control Department (QCD) and prepared for packing are sealed.

1.6 Packing of the detector

1.6.1 Packing is performed in accordance with the requirements specified in BICT.412915.025-06 design documents.

1.6.2 When packed for transport, detectors are placed into unitized shipping containers, i.e. packing boxes as required by ГOCT 5959-80.

1.6.3 The size of packing boxes depends on the number of detectors to be transported. Weight of a single transport article (gross weight) should not exceed 10 kg, while its largest dimensions should be less than 1 m. Inside surfaces of the walls, bottom and cover of the box should be furnished with corrugated cardboard according to the ГOCT 7376-89 standard.

1.6.4 The detectors are allowed to be packed in shipping containers in two or more layers with insertion of corrugated cardboard sheets between layers.

1.6.5 To avoid free movement of the detectors inside a shipping container, corrugated cardboard pads may be used.

1.6.6 Other types of unitized containers and cushioning materials, which do not degrade the quality of package and meet the requirements specified in 9.2, are allowed.

2 PURPOSE OF USE

2.1 Operating limitations

Operating limitations are given in Table 2.1.

Table 2.1

Operating limitations	Limitation parameters
1 Ambient air temperature	from -18 to $+50$ °C
2 Relative humidity	up to 95 % at $+35$ °C temperature, non-condensing
3 Gamma radiation influence	DER up to 1 Sv/h during 5 min

2.2 Preparation for operation and use

2.2.1 Safety measures before putting the detector in use, scope and order of external examination.

2.2.1.1 The detector contains no external parts exposed to voltages hazardous for life.

Direct use of the detector is not dangerous for the user, and is environmentally friendly.

The detector meets the requirements of ДСТУ 7237:2011 with regard to people protection against electric shock hazard of class safety II according to ГОСТ 12.2.007.0-75.

A special protective jacket is used to prevent accidental contact with conductive parts. The ingress protection rating is IP30 according to ГОСТ 14254-96.

The detector complies with the requirements of fire safety standards ГОСТ 12.1.004-91, ГОСТ 12.2.007.0-75 and НАПБ Б.01.001.

2.2.1.2 Before using the detector, unpack it and check if the delivery kit is complete. Examine for mechanical damages.

2.2.2 Read carefully this OM and examine the location and purpose of use of the control and indication means before using the detector.

2.2.3 Prepare the detector for operation in the following way:

- unpack the detector;
- open the battery compartment as shown in Figure 2. Insert two AAA batteries (from the delivery kit), observing the polarity.

Note. As soon as the batteries are inserted, the detector turns on.



Figure 2 – Removing the back cover

2.3 Use of the detector

2.3.1 Safety measures

Safety measures during the use of the detector should be compliant with 2.2.1 of the present OM.

2.3.2 List of possible troubles and troubleshooting

2.3.2.1 The list of possible troubles and troubleshooting is presented in Table 2.2.

Table 2.2


Trouble	Probable cause	Solution
<p>1 The detector does not switch on after the  button is pressed</p>	<p>1 The battery is discharged</p> <p>2 No contact between the batteries and the battery compartment clamps</p> <p>3 One of the batteries is out of order</p>	<p>1 Replace the batteries</p> <p>2 Restore the contact between the batteries and the battery compartment clamps</p> <p>3 Replace the batteries</p>


Table 2.2 (continued)


Trouble	Probable cause	Solution
2 Low battery indication is displayed after the batteries have been replaced when the detector is switched on	1 Poor contact between the batteries and the battery compartment clamps	1 Clean out the contacts on the clamps and the batteries
	2 One of the batteries is out of order	2 Replace the batteries

2.3.2.2 When failed to eliminate the troubles presented in Table 2.2 or detect more complicated troubles, the detector should be sent for repair to the repair services or to the manufacturer (see Repair section).

2.3.3 Operation procedure

2.3.3.1 Display and control means

On the right side of the front cover of the detector there is the  button and the two-color LED indicator.

The  button turns the detector on and off as well as places it in the pairing mode with the iOS device.

The two-color LED indicator shows the status of a data connection between the detector and the iOS device as well as the charging status of the detector's batteries.

High-frequency blinking of the LED indicator means that the data connection between the detector and the iOS device is absent. The detector is trying to establish a connection. The low frequency indicates that the data connection is made, and the detector operates under the control of the special-purpose software launched on the iOS device.



When the LED is continuously lit, the detector is discoverable for external devices and ready to be paired with the iOS device.

The LED indicator flashes different colors to show battery charging statuses: green (the norm) – battery residual capacity is more than 25 %; red (discharge) – battery residual capacity is less than 25 %.

The iOS device along with the installed special-purpose software, which can be downloaded from the App Store, has to be used for displaying, storing and processing measurement results, as well as controlling operating modes of the detector.

An operation procedure for the special-purpose software intended for the iOS device is described in instructions on its use.

2.3.3.2 Switch-on by pairing the detector with the iOS device

To switch the detector on and set it to the pairing mode with the iOS device, press the  button and hold it pressed until the LED indicator stops blinking and is continuously lit (during 4 seconds). After that release of the  button makes the detector discoverable and ready to be paired.

With the means of the operating system of the iOS device, search for the Bluetooth radio interface of the detector and pair with it.

To do¹⁾ this, choose:

Settings -> Bluetooth,
then turn on Bluetooth, wait until the iOS device

1) In iOS 5.1.1 operating system and more earlier versions choose:
Settings -> General -> Bluetooth.

finds the detector and displays its name in the format:



GS#XXXXXX,

where XXXXXX is the serial number labeled on the housing of the detector. Then select a detector you want to pair with.

After successful pairing with the iOS device, the detector will automatically switch off. If pairing was not achieved during three minutes, the detector will be also disabled.

2.3.3.3 Switch-on by entering the measurement mode

Before the detector is set to the measurement mode, the special purpose software should be started on the iOS device.


To switch the detector on, press the  button until the LED indicator starts blinking. When the LED indicator starts blinking, release the  button.


After this the detector instantly starts DER and DE measurements and attempts to make a data connection with the iOS device it has been previously paired with. In case of a successful data connection, the LED indicator starts blinking at low frequency. If the data connection fails to be established within two minutes, the detector will automatically switch off.

The probable causes of a data connection failure between the detector and the iOS device are:

- the detector was not paired with the iOS device;
- the distance between the detector and the iOS device is too long (maximum distance at which data communication is performed between the detector and the iOS device is 5 m, with no obstructions between them such as concrete or metal walls, etc.);
- the special-purpose software is not launched on the iOS device.

2.3.3.4 Switch-off

If there is no data connection between the detector and the iOS device, or the detector is in the pairing mode with the iOS device, use the  button to switch the detector off. This is achieved by pressing and holding the button for more than 4 seconds. The switched off detector will be indicated by the non-blinking LED indicator.

If the data connection between the detector and the iOS device is established, the  button is inactive, and the detector can be switched off with the use of the special-purpose software launched on the iOS device.

2.3.3.5 Battery replacement

If the LED indicator is blinking red, the batteries of the detector should be replaced.

Switch off the detector, and then remove the lid of the battery compartment (as shown in Figure 2) and insert newly charged batteries.

Note. If the detector is operating in a dusty environment or during atmospheric precipitations, it should be placed into a plastic bag or a special case attached to a waist belt.

3 MAINTENANCE

3.1 Technical maintenance of the detector

3.1.1 General instructions

The detector after manufacture is calibrated and is not subject to verification.

The list of operations during technical maintenance (hereinafter called the TM) of the detector, the order and peculiarities of operational phases are given in Table 3.1.

Table 3.1 – List of operations during technical maintenance

Operations	TM type			OM item No.
	during		during	
	everyday use	periodic use (once a year)	long-term storage	
External examination	+	+	+	3.1.3.1
Delivery kit completeness	-	+	+	3.1.3.2
Operability check	+	+	+	3.1.3.3
Batteries switching off and their status control	-	+	+	3.1.3.4
Calibration of the detector	-	-	-	3.2
Note: “+” means the operation is applicable to this type of TM; “-” means the operation is not applicable.				

3.1.2 Safety measures

Safety measures during technical maintenance fully comply with safety measures stated in 2.3.1 of the present OM.

3.1.3 Maintenance procedure of the detector

3.1.3.1 External examination

External examination of the detector should be performed in the following order:

a) check the technical condition of component parts surface, integrity of seals, absence of scratches, traces of corrosion, and surface damage of the detector;

b) check the condition of battery clamps in the battery compartment.

3.1.3.2 Delivery kit completeness check

Check if the delivery kit of the detector is complete according to Table 1.1.

3.1.3.3 Operability check of the detector

Operability check of the detector is performed according to 2.3.3 of this OM.

3.1.3.4 Batteries switching off and their status control

Power supply is switched off each time the detector is not in use for a long time. Do this as follows:

- switch off the detector;
- remove the lid of the battery compartment;
- remove the batteries;
- examine the battery compartment, check the contact clamps, clean the battery compartment from dirtying and contact clamps from oxides;
- make sure there is no humidity, no salt spots on the battery surface, and the insulated coating is not damaged.

3.2 Calibration of the detector

The detectors after manufacture should be calibrated with ^{137}Cs against standard sources of ionizing radiation and are not subject to verification.

4 CERTIFICATE OF ACCEPTANCE

The UDKG-01i “Gamma Sapiens” intellectual gamma radiation detector of BICT.412129.026-06 type with _____ serial number meets the technical requirements specified in TY Y 33.2-22362867-029:2012, and is calibrated and accepted for use.

Date of manufacture _____

Stamp here

QCD Representative: _____
(signature)

5 PACKING CERTIFICATE

The UDKG-01i “Gamma Sapiens” intellectual gamma radiation detector of BICT.412129.026-06 type with _____ serial number is packed by the private enterprise “SPPE “Sparing-Vist Center” in accordance with the requirements specified in TY Y 33.2-22362867-029:2012.

Date of packing _____

Stamp here

Packed by _____
(signature)

6 WARRANTY

6.1 The manufacturer guarantees the conformity of the detector to the TY Y 33.2-22362867-029:2012 technical specifications on condition that the customer observes the guidelines on its use, shipping and storage presented in the operating manual.

6.2 The warranty period of the detector shall terminate and be of no further effect in 18 months after the date of commissioning, or after the end of the storage period.

6.3 The warranty period of storage of the detector is 6 months after its manufacture date.

6.4 Free of charge repair or replacement during the warranty period of use is performed by the producer enterprise provided that:

6.4.1 The customer observed the guidelines on its use, shipping and storage.

6.4.2 The customer encloses a warranty certificate filled out accurately and clearly.

6.4.3 The customer encloses the failed detector.

6.5 If the defect in the detector (according to the claim) is eliminated, the warranty period is prolonged for the time when the detector was not used because of the detected defects.

6.6 The batteries failure is not a reason for claim, after their warranty period is expired.

6.7 Warranty is void in case of:

6.7.1 Any mechanical or thermal damage;

6.7.2 Any liquid remains;

6.7.3 Foreign objects found inside the detector;

6.7.4 The warranty stamps are violated, the housing opened, repairs or any internal changes made;

6.7.5 The serial number of the detector deleted or changed.

7 REPAIR

7.1 In case of failure or troubles during the warranty period of the detector, the user should deliver the detector to the retail outlet or the producer enterprise at the address:

PE “SPPE “Sparing-Vist Center”

33 Volodymyr Velyky Str.,

Lviv 79026, Ukraine

Tel.: (+380 32) 242 15 15;

Fax: (+380 32) 242 20 15

E-mail: sales@ ecotest.ua

7.2 Warranty and post warranty repair is performed by the producer enterprise or any other enterprise authorized by the manufacturer if the warranty certificate is available.

8 STORAGE

8.1 The detectors should be stored in the packing box in compliance with conditions 1 of ГOCT 15150-69 in heated and ventilated storehouses with air-conditioning at the ambient air temperature from +5 to +40 °C and relative humidity up to 80 % at +25 °C temperature, non-condensing. The storehouse should be free of acids, alkali and gases that may cause corrosion, and vapors of organic solvents.

8.2 The location of the detectors in the storehouses should ensure their free movement and access to them.

8.3 The detectors should be stored on the shelves.

8.4 The distance between the walls, the floor of the storehouse and detectors should be at least 100 mm.

8.5 The distance between the heating gadgets of the storehouse and the detectors should be at least 0.5 m.

9 SHIPPING

9.1 Packed detectors may be transportable by any kinds of closed transport vehicles under the conditions 4 of (with temperature limitations in the range from -25 to $+55$ °C) ГOCT 15150-69 and the rules and standards valid for each means of transport.

9.2 The detectors in shipping containers should be placed and fastened in the vehicle so that their stable position is ensured and shocks (with each other and the sidewalls of the transport) are avoided.

9.3 The detectors in shipping container endure:

- temperature from -25 to $+55$ °C;
- relative humidity (95 ± 3) % at 35 °C temperature;
- shocks with acceleration of 98 m/s^2 , a shock pulse duration of 16 ms (number of shocks – 1000 ± 10 in each direction).

10 DISPOSAL

Disposal of the detector is performed in compliance with the group 4 of ДСанПіН 2.2.7.029-99, i.e. metal is recycled or melted, and plastic parts are dumped.

Disposal of the detector is not dangerous for the service personnel, and is environmentally friendly.

WARRANTY CERTIFICATE

for UDKG-01i “Gamma Sapiens” intellectual gamma
radiation detector

TY Y 33.2-22362867-029:2012

Serial number _____

Manufacture date _____

Primary calibration performed _____

Hereby I confirm the acceptance of the packed
detector applicable for use and the acceptance of the
warranty terms

Sales date _____

Salesperson _____

signature

Stamp here

Note. If any controversy arises, the parties should
act in accordance with the Article 14 of the Law of
Ukraine on the Protection of Consumer Rights.